

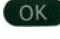 







### Description of the Key Pad and Display








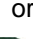 







1. Time
  2. Activated programmes (time clock is on)
  3. Day of the week
  4. Desired room temperature
  5. Room temperature
- 
- A. Operation confirmation key
  - B. Up key
  - C. Down key
  - D. On / Off switch
  - E. Menu / Cancel key (All menu settings)

**The program comes set in English, if not this can easily be changed**

#### Language Setting











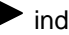 

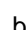 

1. Switch on the unit, the display should be showing a time and temperature on the screen.
2. Press the  key once.
3. Press the  key once.
4. Press the  key once.
5. Press the  key once.
6. Press the  key.
7. Press the  key to scroll down until the  indicator is positioned beside English.
8. Press the  key, the program is now set in English.

#### Setting the Time


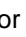 


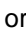 
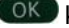 
1. Have the time and temperature on the screen.
2. Press the  key.
3. Press the  key, this will make the  indicator position itself in front of the word configuration.
4. Press the  key this will make the  indicator position itself in front of the word time.
5. Press the  key.
6. Press the  or  key to enter the correct hour setting.
7. Press the  key.
8. Press the  or  key to enter the correct minute setting.
9. Press the  key.
10. Press the  or  Key to enter the correct day of the week.
11. Press the  key, the time and day are now set.

---


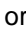 


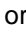 


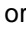 

## How to program the heater

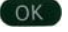 
1. Have the time and temperature on the screen.
2. Press the  key.
3. Press the  key.
4. Press the  key until the  indicator key is beside edit.
5. Press the  key, accept will appear on the screen with the  indicator beside it.
6. Press the  or  key to scroll the menu in order to position the indicator  beside the day you wish to program.
7. When the  indicator is beside the day you want to program press the  key.
8. The  (box) which is beside your chosen day will then have a  symbol indicating that the day in question has been selected.
9. Repeat the process until you have selected the days of the week you wish to have programmed the same.
10. Press the  button until positioning the  indicator beside "accept".
11. Press the  key.

1 on is displayed on the screen, this will be the start time of your first program.

1. Press the  or  key to select the hour.
2. Press the  key.
3. Press the  or  key to select the minute.
4. Press the  key.

1 off is displayed on the screen, this will be the time your first program will end.

1. Press the  or  key to select the hour.
2. Press the  key.
3. Press the  or  key to select the minute.
4. Press the  key.
5. Press the  or  key to enter the desired operating temperature for the program.
6. Press the  key.

Follow the process until you are finished entering the desired programs, then press the  key.

---

## How to raise or lower the room temperature

To raise or lower the room temperature press the  or  key until the desired room temperature indicator (bottom right of screen) displays the desired temperature.

## How to know if the heater is working

When the temperature setting (bottom right of screen) is greater than the room temperature (bottom left of screen) the temperature setting will flash continuously to indicate the heater is heating. If the temperature setting is not flashing the heater is not heating.

**You can have six on and off's for each day of the week**